



UNIC0500MF MULTIFREQUENCY

RADIOCOMANDO DIGITALE QUARZATO A CODICI ROLLING 2
DIGITAL QUARTZ RADIO CONTROL WITH ROLLING CODES 9
TÉLÉCOMMANDE RADIO DIGITALE AU QUARTZ À CODES ROLLING -
DIGITALE QUARZGESTEUERTE FUNKSTEUERUNG MIT ROLLING CODES -
RADIOMANDO DIGITAL CUARZADO ROLLING CODE -
DIGITALE AFSTANDSBEDIENING MET QUARTZ EN ROLLING CODE -

100-CHANNEL MULTIFREQUENCY



ZVL734.00

Procedura di programmazione

Il telecomando UNIC0500MF è dotato di un display digitale, 5 pulsanti e un connettore USB-C:


-  tasto di invio comando radio e conferma selezione menu
-  tasto di scorrimento in giù
-  tasto di scorrimento in su
-  tasto Esci
-  tasto di selezione

- Premere qualsiasi tasto per attivare il display. Al primo avviamento il display visualizzerà l'ora e lo stato di carica della batteria.



1) Parametri

- Schermo OFF: spegnimento dello schermo da 0 a 255 secondi;
 - Lingua: (Italiano, English, Français, Deutsch, Español, Nederlands);
 - Ora legale: scegliere tra automatico o manuale;
 - Ordinamento: parametro per ordinare la visione delle funzioni;
 - Beep tasti: attivare gli avvisi acustici.
- Premere e tenere premuto il tasto  per più di 5 secondi per accedere al menu di configurazione e scorrere verso il basso con il tasto  fino ad evidenziare la voce 'Parametri'. Premere il tasto  per confermare la scelta. Scorrere verso il basso con il tasto  per evidenziare il parametro da modificare es. 'Schermo OFF' e premere  per confermare la scelta. Premere  di nuovo per evidenziare in arancione il valore e usare i tasti   per cambiare il valore. Premere  per confermare il valore e  per tornare al menu 'Parametri'.

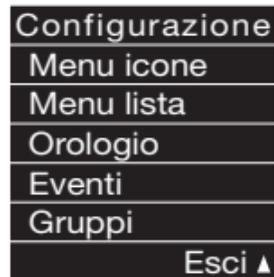

2) Orologio

- Ora: impostare l'ora che appare sullo schermo iniziale;
- Data: impostare la data odierna.

Premere e tenere premuto il tasto  per più di 5 secondi per accedere al menu di configurazione e scorrere verso il basso con il tasto  fino ad evidenziare la voce 'Ora'. Seguire la procedura descritta nel capitolo precedente per modificare i valori.

3) Funzioni

- Aggiungi: Aggiungere funzioni da associare ai codici radio disponibili.

Premere e tenere premuto il tasto  per più di 5 secondi per accedere al menu di configurazione e scorrere verso il basso con il tasto  fino ad evidenziare la voce 'Funzioni'. Premere il tasto  per confermare la scelta. Premere  di nuovo e scegliere il codice radio da attivare 'da 1 a 100' ed il canale da associare 'da A a H'.

Configurazione	Ora
Menu icone	
Menu lista	
Orologio	8:50
Eventi	
Gruppi	
Esci ▲	Esci ▲

Configurazione	Funzioni
Gruppi	Aggiungi
Scenari	
Funzioni	
Parametri	
Versione	
Esci ▲	Esci ▲

Codice n:	Canale
Codice 1	Canale A
Codice 2	Canale B
Codice 3	Canale C
Codice 4	Canale D
Codice 5	Canale E
Esci ▲	Esci ▲

4) Menu lista

Premere e tenere premuto il tasto  per più di 5 secondi per accedere al menu di configurazione e scorrere verso il basso con il tasto  fino ad evidenziare la voce 'Menu lista'. Premere il tasto , scorrere per evidenziare la voce 'Modifica' e premere il tasto  di nuovo. Sul display appariranno le due funzioni precedentemente programmate 'Cancello' e 'Porta Garage'. Evidenziare 'Cancello' e premere il tasto , un quadro verde ■ apparirà a sinistra della scritta indicando l'attivazione. Evidenziare 'Porta Garage' e ripetere la procedura. Attendere lo spegnimento del display e premere qualsiasi tasto. Sul display appariranno le due funzioni. Scegliere uno e premere  il simbolo di trasmissione in corso apparirà sul display. Con due o più funzioni programmate, è possibile utilizzare la funzione 'Ordina' nel 'Menu lista' per visualizzare le funzioni nell'ordine preferito.



5) Menu Icone

• Con il menu Icone è possibile caricare simboli grafici da utilizzare al posto delle scritte 'Cancello' e 'Porta Garage' utilizzate nel nostro esempio. Quindi, premere e tenere premuto il tasto  per più di 5 secondi per accedere al menu di configurazione e scorrere verso il basso con il tasto  fino ad evidenziare la voce 'Menu Icone'. Premere il tasto , scorrere per evidenziare la voce 'Modifica' e premere il tasto  di nuovo. Sul display appariranno le due funzioni precedentemente programmate 'Cancello' e 'Porta Garage'. Evidenziare 'Cancello' e premere il tasto , un quadro verde ■ apparirà a sinistra della scritta indicando l'attivazione. Evidenziare 'Porta Garage' e ripetere la procedura. Premere il tasto  per tornare al menu 'Menu Icone' che ora presenta tre voci 'Modifica', 'Icone' e 'Ordina'. Selezionare 'Icone' e premere . Evidenziare 'Cancello' e premere .



Usare i tasti   per scorrere tra le icone disponibili e scegliere quelle più adatte:



Attendere lo spegnimento del display e premere qualsiasi tasto. Sul display appariranno le due funzioni. Per attivare il display ad icone premere il tasto  per più di 3 secondi (premerlo nuovamente per altri 3 secondi per tornare al menu lista). Scorrere e scegliere un'icona poi premere  il simbolo di trasmissione in corso apparirà sul display. Con due o più funzioni programmate, è possibile utilizzare la funzione 'Ordina' nel 'Menu icone' per visualizzare le funzioni nell'ordine preferito.



Programming procedure

The UNIC0500MF radio control device is fitted with a digital display, 5 buttons and a USB-C connector:






-  radio command send key and menu selection confirmation
-  scroll down key
-  scroll up key
-  exit key
-  select key

- Press any key to activate the display. On start-up, the display will show the time and the battery charge level.



1) Parameters

- **Screen OFF:** turning off the screen, range from 0 to 255 seconds;
 - **Language:** (Italiano, English, Français, Deutsch, Español, Nederlands);
 - **Summer time:** choose between automatic or manual;
 - **Sorting:** parameter for sorting the order in which the functions appear;
 - **Beep feedback:** activate key beeps.
- Press and hold the  key for more than 5 seconds to access the configuration menu and scroll down using  until 'Parameters' appears. Press the  key to confirm your choice. Scroll down with the  key to highlight the parameter to be changed e.g. 'Screen OFF' and press  to confirm your choice. Press  again to highlight the value in orange and use the   keys to change the value. Press  to confirm the value and  to return to the 'Parameters' menu.

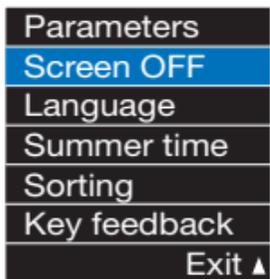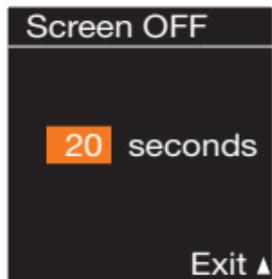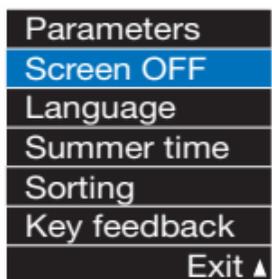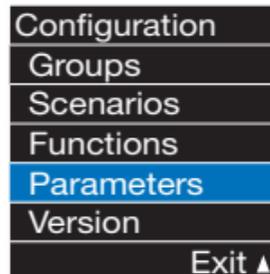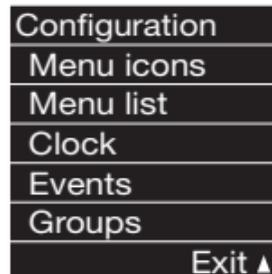

2) Clock




- **Time:** set the time that will appear on the home screen;
- **Date:** set today's date.

Press and hold the  key for more than 5 seconds to access the configuration menu and scroll down using the  key until 'Time' is highlighted. Follow the procedure described in the previous chapter to change values.

3) Functions

- **Add:** Add functions to associate with the available radio codes.

Press and hold the  key for more than 5 seconds to access the configuration menu and scroll down using the  key until 'Functions' is highlighted. Press the  key to confirm your choice. Press  again and choose the radio code to activate 'between 1 and 100' and the channel to associate it with 'from A to H'.

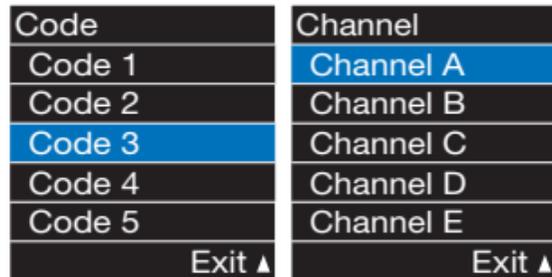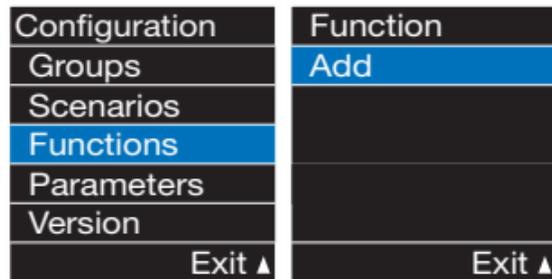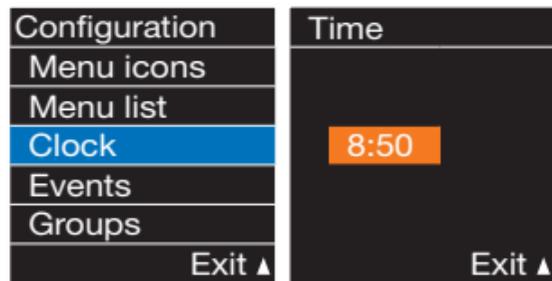




Choose the channel type 'Mono directional' (without signal feedback) or 'Bidirectional' (transceiver with information feedback). Choose the transmission frequency between '433 MHz' and '868 MHz'.

Press the  key to confirm your choice. The  will appear on the display. Press  to send a command and then 'Next'  to change the description.

Press the  key to highlight the first letter in orange and use the   keys to change the wording, letter by letter, to 'Gate' for example. Press the  key to return to the 'Function' menu, which now has three items 'Add', 'Modify' and 'Delete'.



Repeat the procedure (choosing another channel to add other functions e.g. 'Garage Door').

At this point, in order to access the commands we have just loaded, we must activate them in the 'List menu'.

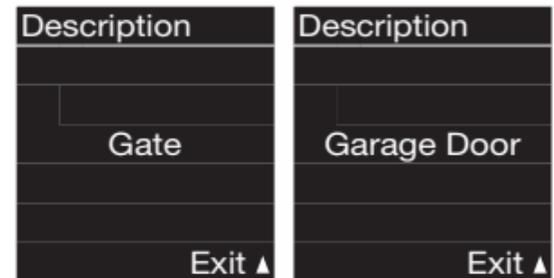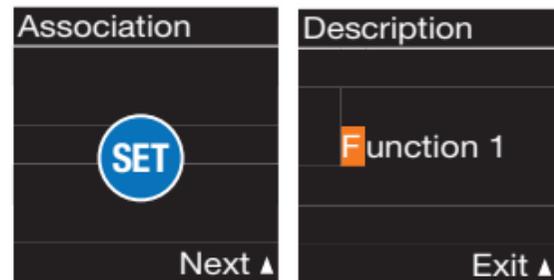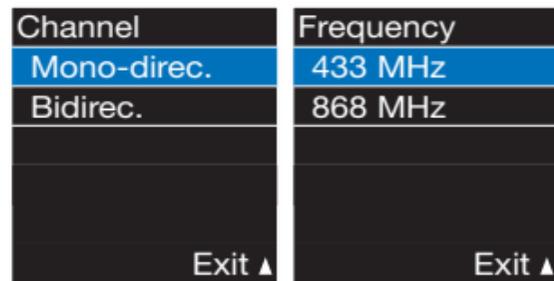

4) Menu list




Press and hold the  key for more than 5 seconds to access the configuration menu and scroll down using the  key until 'Menu list' is highlighted. Press the  key, scroll to highlight 'Modify' and press  again. The display will show the two previously programmed functions 'Gate' and 'Garage Door'. Highlight 'Gate' and press the  key, a green square ■ will appear to the left of the text indicating activation. Highlight 'Garage Door' and repeat the procedure. Wait for the display to switch off and press any key. The two functions will appear on the display. Choose one and press the  key, the continuous transmission symbol will appear on the display. With two or more functions programmed, you can use the 'Sort' function in the 'Menu list' to display the functions in the order you prefer.

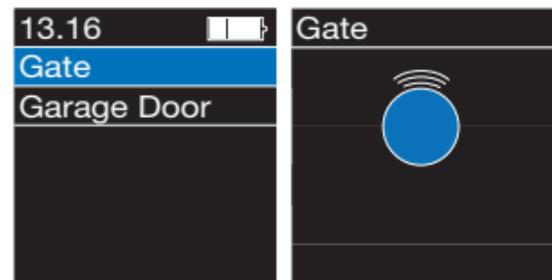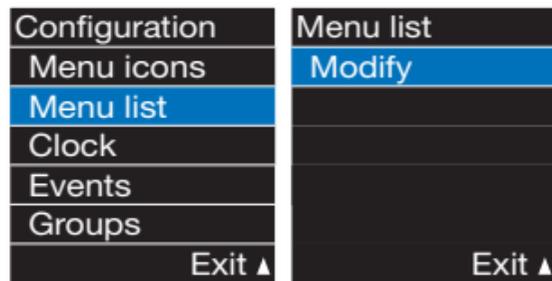

5) Menu icons

• Using the Icons menu, it is possible to load graphic symbols to be used instead of the words 'Gate' and 'Garage Door' used in our example. Then, press and hold the  key for more than 5 seconds to access the configuration menu and scroll down using the  key until the 'Menu icons' item is highlighted.



Press the  key, scroll to highlight 'Modify' and press the  key again. The display will show the two previously programmed functions 'Gate' and 'Garage Door'. Highlight 'Gate' and press the  key, a green square ■ will appear to the left of the text indicating activation. Highlight 'Garage Door' and repeat the procedure. Press the  key to return to the 'Icons Menu', which now has three items 'Modify', 'Icons' and 'Sorting'. Select 'Icons' and press . Highlight 'Delete' and press .

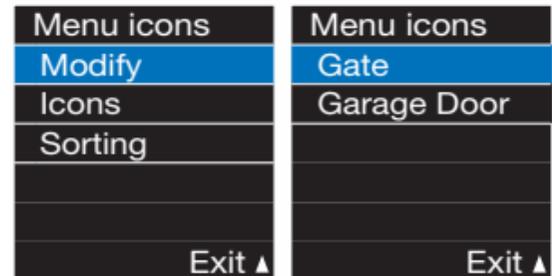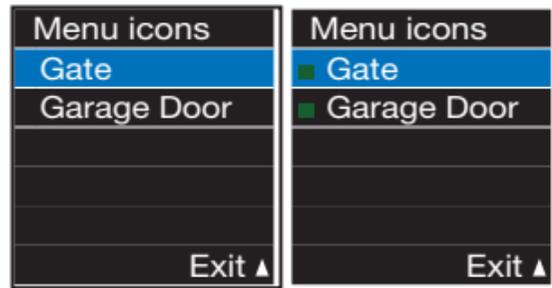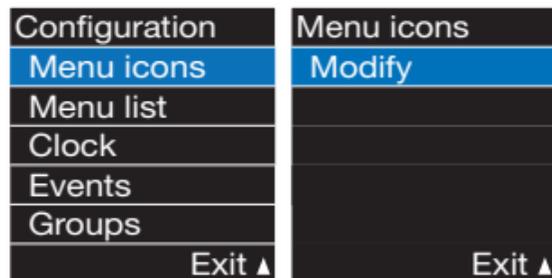

Use the   keys to scroll through the available icons and choose the most suitable ones:



Wait for the display to switch off and press any key. The two functions will appear on the display. To activate the icon display, press the  key for more than 3 seconds (press it again for another 3 seconds to return to the list menu). Scroll and choose an icon then press the  key. The signal transmission symbol will appear on the display. With two or more functions programmed, you can use the 'Sort' function in the 'Icon Menu' to display the functions in the order you prefer.

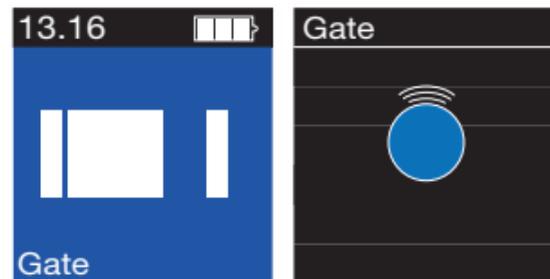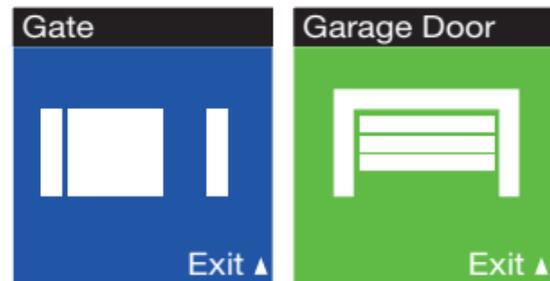



riello
elettronica

CARDIN HOTLINE ITALY

04 38 40 41 50

CARDIN ELETTRONICA S.P.A
VIA DEL LAVORO, 73 – Z.I. CIMAVILLA - 31013 CODOGNÈ (TV) ITALY
GPS 45.864, 12.375
TÉL: (+39) 04 38 40 40 11
FAX: (+39) 04 38 40 18 31
E-MAIL (ITALY): SALES.OFFICE.IT@CARDIN.IT
E-MAIL (EUROPE): SALES.OFFICE@CARDIN.IT
HTTP:// WWW.CARDIN.IT

CARDIN ELETTRONICA FRANCE
333, AVENUE MARGUERITE PEREY
77127 LIEUSAIN CEDEX
TÉL: 01 60 60 39 34
FAX: 01 60 60 39 62
HTTP:// WWW.CARDIN.FR

CARDIN HOTLINE FRANCE

0892 68 67 07

CARDIN ELETTRONICA DEUTSCHLAND
NEUFAHRNER STR. 12B
D-85375 NEUFAHRN/GRÜNECK
TEL: +49 81 65 94 58 77
FAX: +49 81 65 94 58 78
HTTP:// WWW.CARDIN-DE.DE

CARDIN HOTLINE DEUTSCHLAND

0172 6742256

CARDIN ELETTRONICA BELGIUM
ACACIASTRAAT 18B
B-2440 GEEL
TÉL: +32(0)14/368.368
FAX: +32(0)14/368.370
HTTP:// WWW.CARDIN.BE

CARDIN HOTLINE BELGIUM

014 368 368

GPS AUTOMATION
DE CHAMOTTE 2
4191GT GELDERMALSEN
TEL: +31 (0)345 630 503
EMAIL: INFO@GPS-AUTOMATION.NL
HTTP:// WWW.CARDIN.NU
HTTP:// WWW.GPS-AUTOMATION.NL

CARDIN HOTLINE NETHERLANDS

0345 630 503